


PTO Accessory Y Harness, Q-Logic 3 with Fenders Lights / PTO QBC


Standard Motors

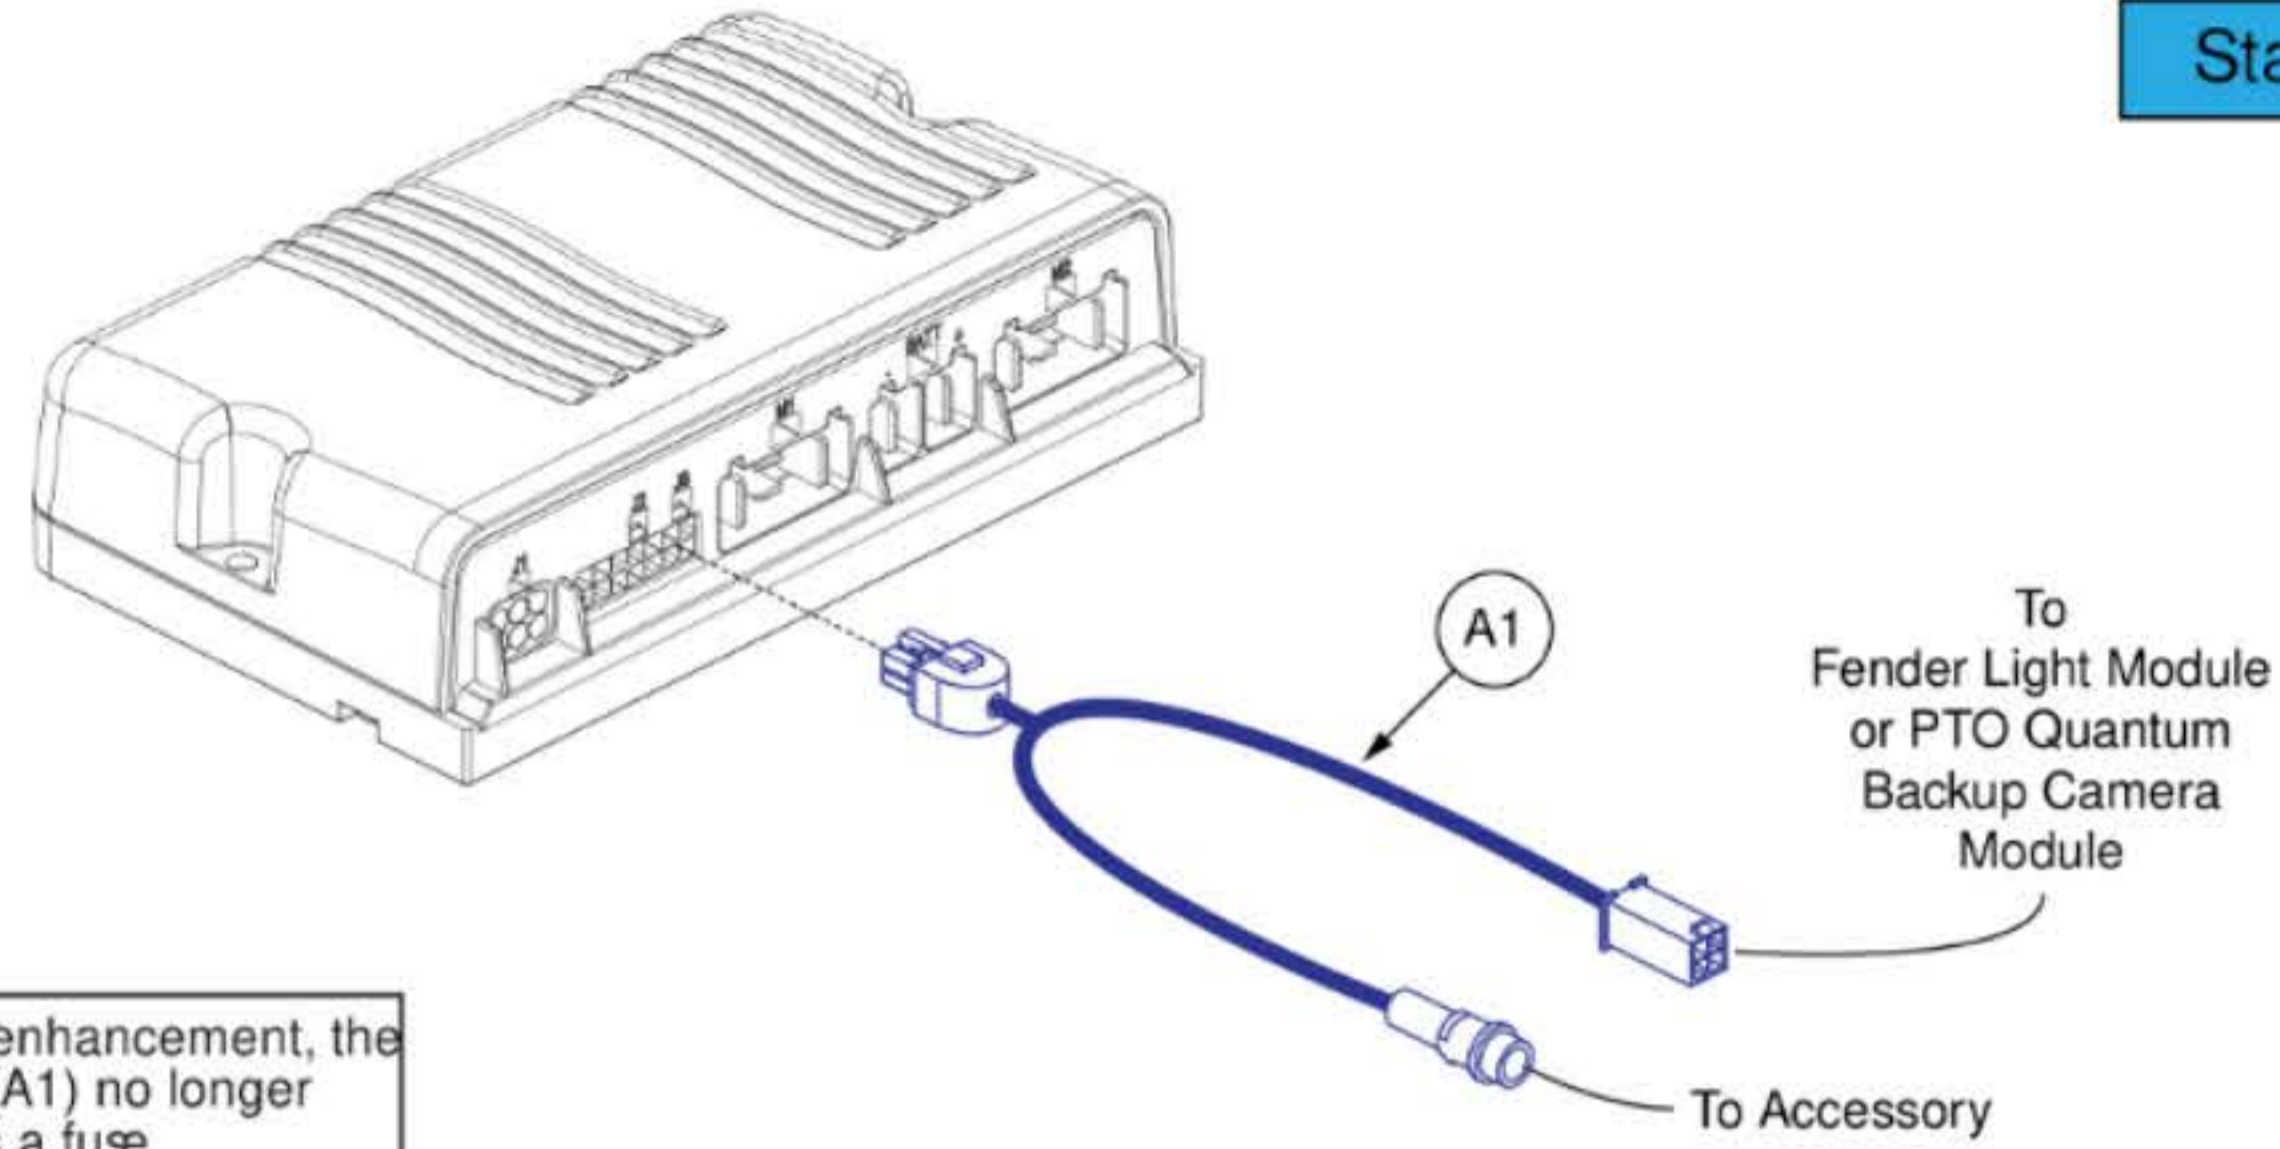

Due to a product enhancement, the PTO harness (A1) no longer contains a fuse.

The PTO Accessory Harness must be used in conjunction with the fender light module and/or PTO Quantum Backup Camera Module. Failure to do so will result in a drive inhibit error.

Quantum Encoder Motors, Q6 Edge 3 / Q6 Edge 3 Stretto

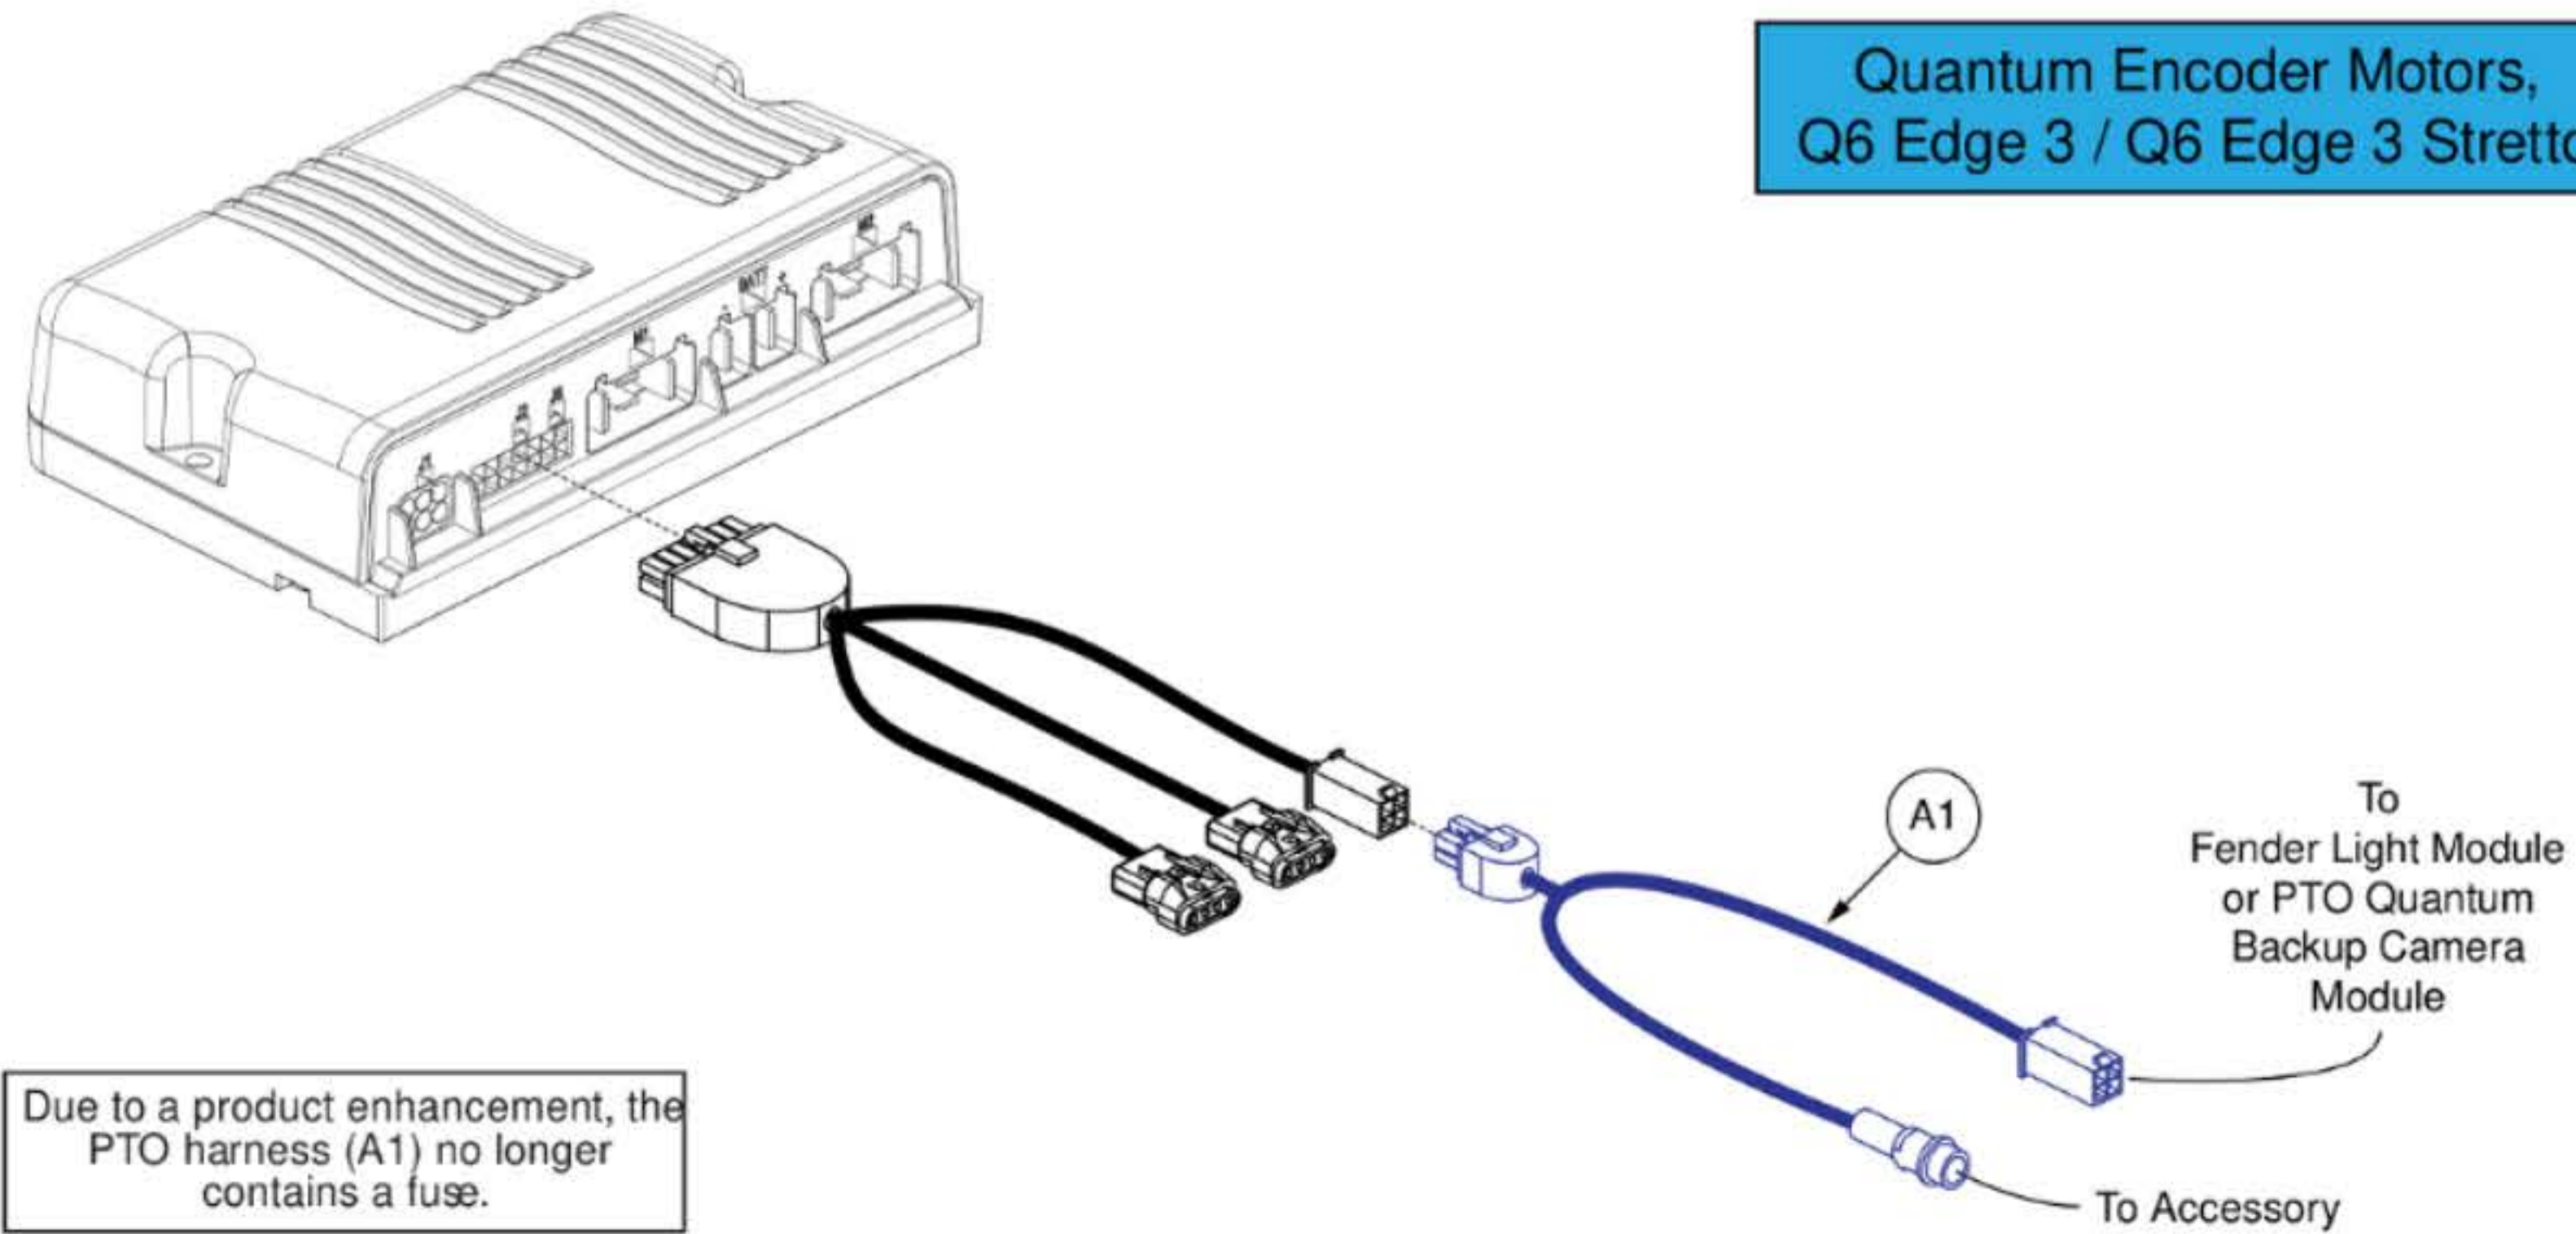

Due to a product enhancement, the PTO harness (A1) no longer contains a fuse.